




MaxxECU

Notes:
Cables shields should only be grounded through the ECU.
Text in blue is the cable markings.


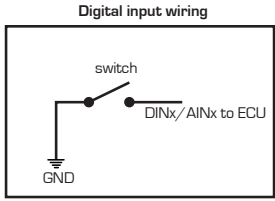


Sensor GND must **NEVER** be connected to chassis ground!


Wiring alternative for crank / home signal

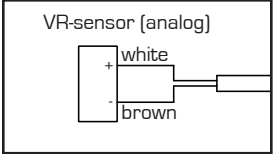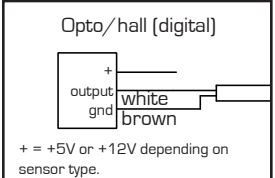

LSU connector seen from the cable side

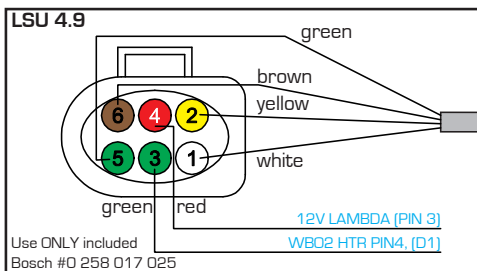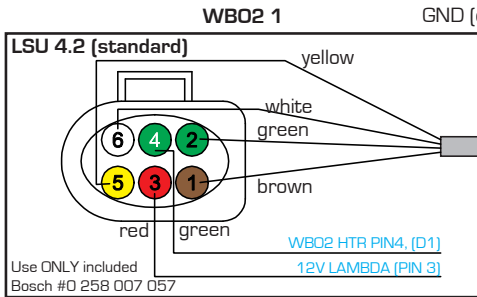

Warning: Correct sensor must be selected in MTune before usage!

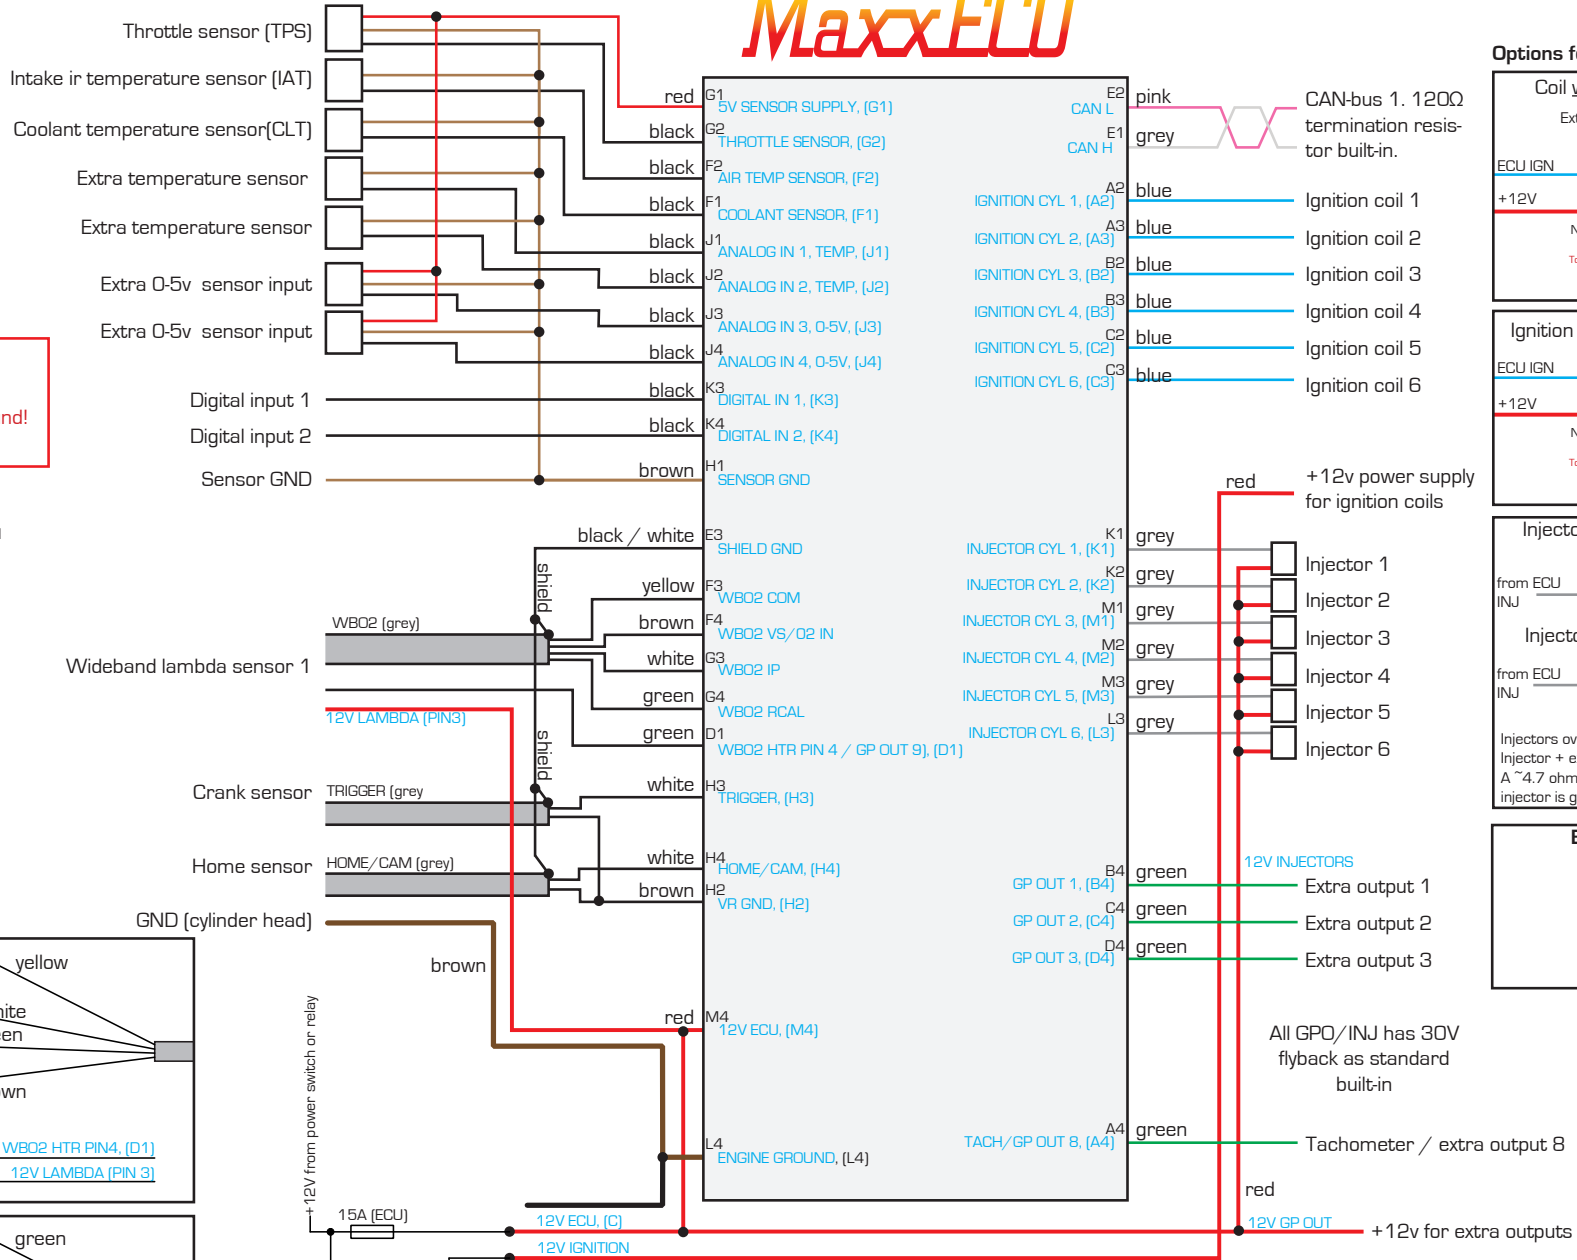

Options for connecting ignition coils

